

Our bolo tie slides have a Bennett Clasp backing. The back tab flips up to move the slide up or down the cord, then locks down to hold the slide in place.



Instructions for attaching a slide to a bolo tie cord are given below. If you are not comfortable using pliers, you may prefer to take the slide and bolo tie cord to your local jeweler for attachment.


To ensure that you don't scratch the front, set the bolo on a soft piece of fabric.



1. Remove the tab from one side of the backing. Gently bend one side of the backing outwards until the tab pops out.



2. Remove the tab fully. Once the first side of the tab is removed, the second side will slip out.

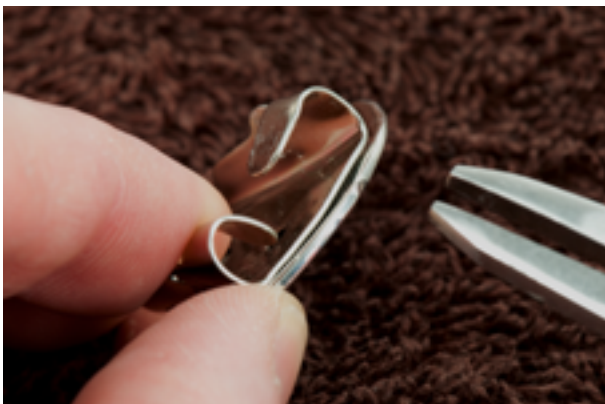

3. Open the cord channels. The channels will curve around the two sections of cord. Cords with tips, such as our bolo ties, cannot slip through the channels in their curved position. Use pliers to open the channels enough to slip the cord into place.



4. Slip one side of the cord into place. Use pliers to curve the channel around the cord.

The channels are located at the top of the slide. Take care to insert the cord so that the neck section is above the top of the slide.



5. Repeat for the second channel. Slip the second cord into the channel, then use the pliers to curve the channel around the cord.



6. Reattach the tab. Hold the tab at right angles to the slide, with the short side of the tab facing away from the channels. Insert each side of the tab in the sides of the backing.



7. Using pliers, gently bend back the side of the backing so that the tab is securely attached.



The Bennet Clasp, attached to our bolo tie cord.



The finished slide.

 **David Morgan**

11812 N Creek Pky N, Suite 103  
Bothell WA 98011

Tel: (800) 324-4934 • Fax: (425) 486-0224  
[www.davidmorgan.com](http://www.davidmorgan.com) • [catalog@davidmorgan.com](mailto:catalog@davidmorgan.com)